

# Wiring I/O Modules

There are two available methods for wiring most I/O modules: The ZIPLink wiring system or hand wiring to the optional removable I/O module terminal blocks.

Note: The high-density 32-point and 64-point I/O module design requires the use of the ZIPLink wiring system. Thermocouple and RTD modules are not compatible with the ZIPLink system and are shipped with the optional terminal blocks included.



## ZIPLinks Wiring Systems

For wiring I/O modules, we strongly recommend using pre-wired ZIPLinks wiring systems, which eliminate the need for hand wiring modules to terminal blocks.

See the selection matrix on the following page.



**ZIPLink Module**



**ZIPLink Pre-Wired Terminal Block Cable**



**ZIPLink Pigtail Cable**

## Removable Terminal Blocks

For most I/O modules you can also purchase a removable terminal block (part no. P3-RTB).

Note: P3-RTB supplied with thermocouple and RTD modules. P3-RTB not compatible with 32-point and 64-point I/O modules.



**Removable Terminal Block P3-RTB**

## Terminal Block Removal

